


MOPAR

INSTRUCTIONS FOR INSTALLING MOPAR MIRROR-MATIC MIRROR PART NO 1881 940

MOPAR

ON
1959 PLYMOUTH, DODGE, DE SOTO,
CHRYSLER AND IMPERIAL

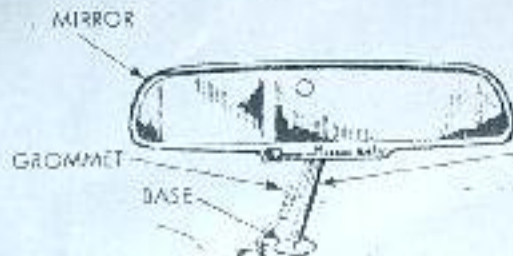

SHAFT - REPLACE ORIGINAL
SHAFT ON DODGE, DE SOTO,
CHRYSLER AND IMPERIAL WITH
SHAFT PROVIDED IN PACKAGE

DRILL 5/16" DIA. HOLE

FEED WIRE

FUSE AND FUSE HOLDER

CONNECT THIS WIRE TO
TERMINAL MARKED "H" ON
HEADLAMP SWITCH

CHRYSLER CORPORATION
SERVICE PARTS AND ACCESSORIES SUPPLY DIVISION
DETROIT 31, MICHIGAN