



FRONT FLOOR MAT INSTRUCTION SHEET  
 CHEVROLET, CHEVELLE, CHEVY & PASS "F" SERIES

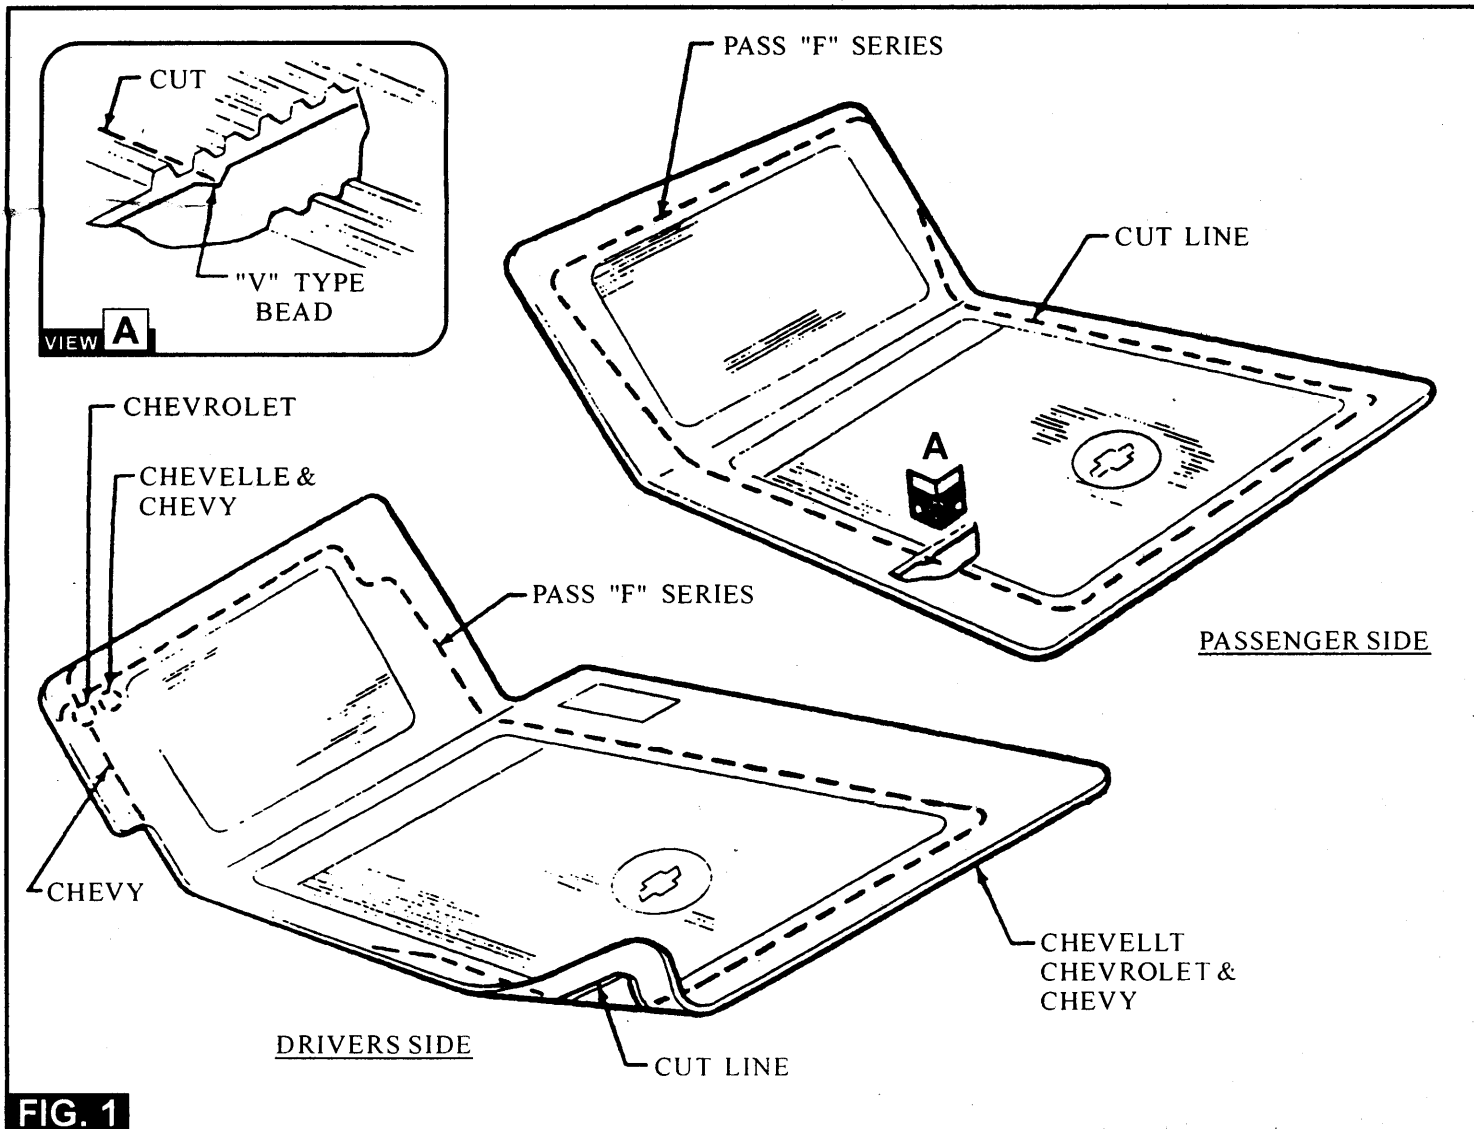

**STEP1** (DRIVERS SIDE MAT FOR ALL MODELS)  
 REVERSE FLOOR MAT TO UNDERSIDE, LOCATE  
 PARTICULAR MODEL & CUT MARKED AREA &  
 DISCARD WASTE. SEE FIG. 1 & VIEW A.

**STEP1** (PASSENGER SIDE MAT PASS "F" SERIES  
 ONLY) REVERSE FLOOR MAT TO UNDERSIDE,  
 LOCATE & CUT MARKED AREA & DISCARD WASTE.  
 SEE FIG. 1 & VIEW A.

REAR FLOOR MAT INSTRUCTION SHEET  
 CHEVROLET, CHEVELLE, CHEVY, CORVAIR, & PASS "F" SERIES

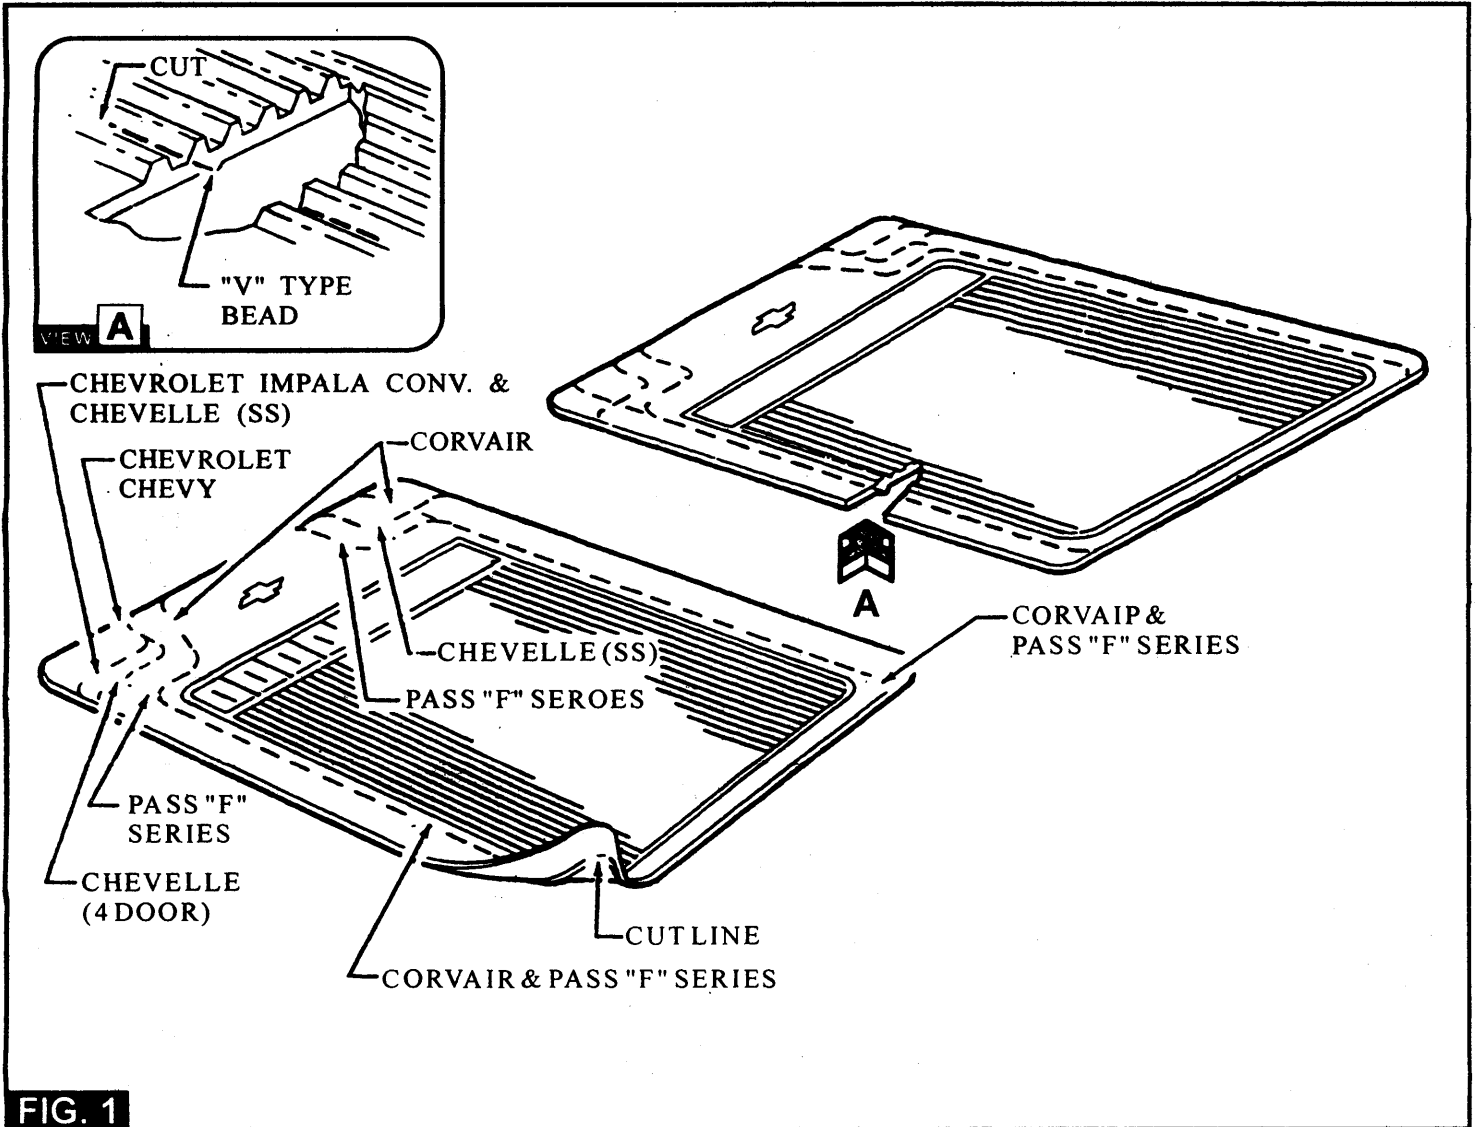

**FIG. 1**

**STEP 1** REVERSE FLOOR MATS TO UNDERSIDE, LOCATE PARTICULAR MODEL, CUT MARKED AREA ALONG "V" TYPE BEAD & DISCARD WASTE. SEE VIEW A & FIG 1.